

Manual


Submersible Pumps

Industrial and
Agricultural Use

Applies for:

Codes	Models
12627	BOS-2LM
12626	BOS-1-1/2LM
12625	BOS-1LM

Codes	Models
16934	BOS-3/4LM2
16933	BOS-1/2LM2

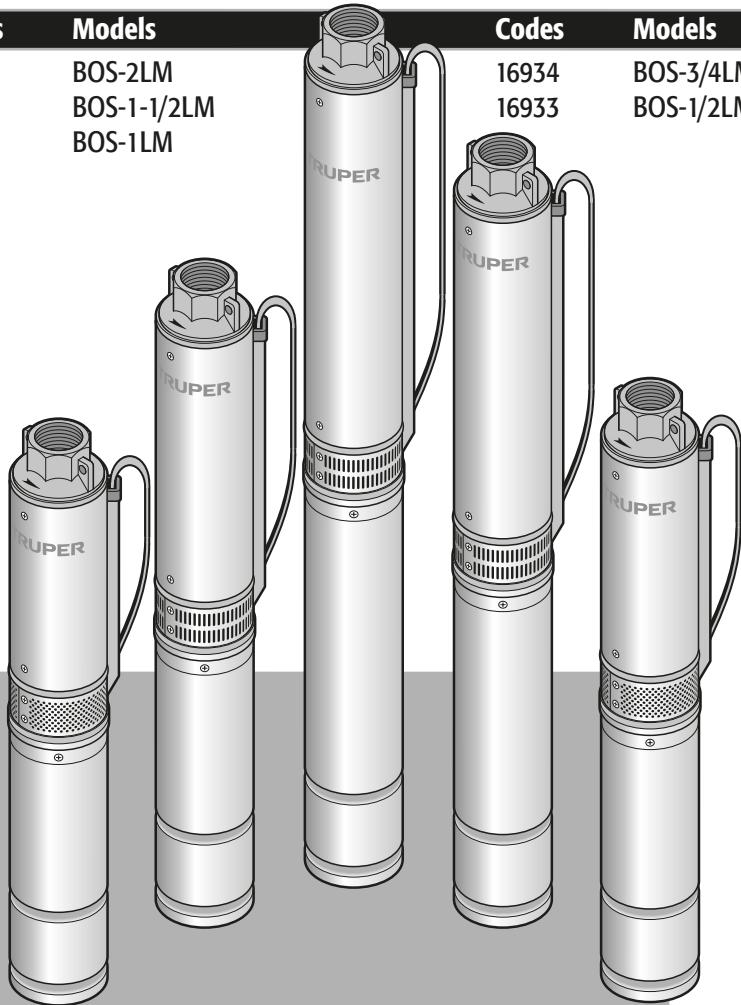Read this manual thoroughly
before using the tool.


Technical specifications.....	3
Power requirements.....	3
General power tool safety warnings.....	4
Safety warnings for submersible pumps.....	5
Parts.....	6
Assembly.....	6
Start Up.....	7
Maintenance.....	8
Troubleshooting.....	9
Notes.....	10
Authorized Service Centers.....	11
Warranty Policy.....	12

! CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

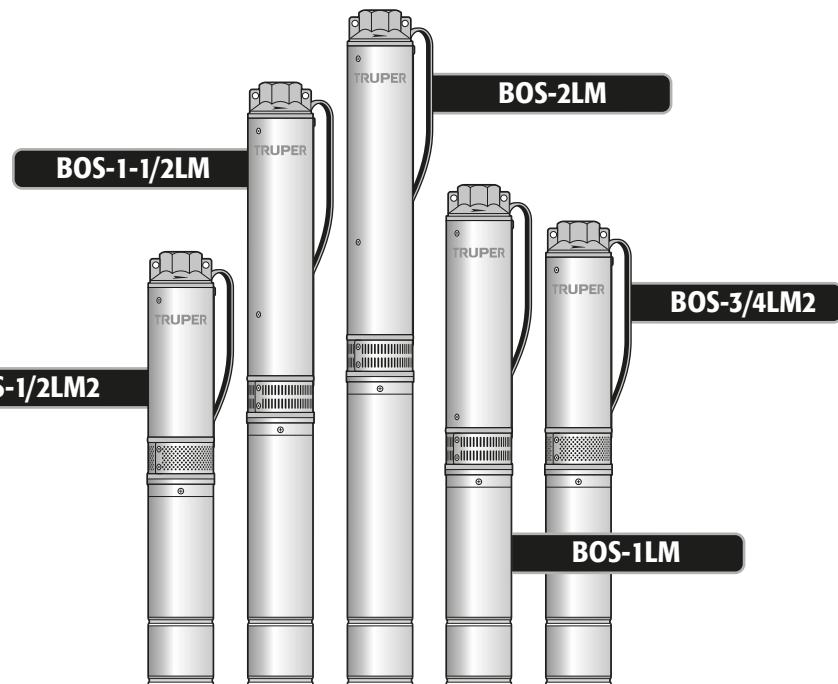

Technical specifications

TRUPER®

	BOS-2LM	BOS-1-1/2LM	BOS-1LM	BOS-3/4LM2	BOS-1/2LM2			
Code	12627	12626	12625	16934	16933			
Description	Submersible pump							
Voltage	110 V ~							
Frequency	60 Hz							
Overcurrent switch	25 A	20 A	15 A	10 A	8 A			
Current	20 A	15.5 A	12 A	8.5 A	6 A			
Maximum flow	160 L/min		120 L/min					
Maximum height	262 ft	197 ft	131 ft		98 ft			
Speed	3 450 RPM							
Outlet diameter	1 1/2 "		1 1/4 "					
Maximum immersion depth	262 ft							
Liquid maximum temperature	95 °F							
Power cable length	3 ft							
Particle passage up to	3/32"		5/64"					
Work cycle	50 minutes' work per 20 minutes' rest. daily maximum 6 hours.							
Insulation	Class I		IP Grade	IPX8				

The power cable has Y-type cable clamps
 The construction class of the tool is: basic insulation.
 The thermal insulation class of the motor windings is: Class F.

WARNING If the power cord is damaged, it must be replaced by the manufacturer or TRUPER® Authorized Service Center, in order to avoid any risk of shock or major accident.

The electrical insulation construction of this tool is altered by splashing or spillage of liquids during operation.
 Do not expose to rain, liquids and/or moisture.

WARNING Before accessing the terminals, all power circuits must be disconnected.




Power requirements

WARNING The tool must be grounded while in use to avoid electrical shock.

- Plug the plug into a properly grounded contact or outlet as shown in example **A**. Not all contacts or outlets are properly grounded. If you are not sure, check with a qualified electrician.
- If the contact you plan to use for your tool is a 2-pole (2-hole) contact DO NOT REMOVE OR ALTER THE GROUND CONDUCTOR OF YOUR PLUG FOR ANY REASON. Use a temporary adapter as shown in example **B** and always connect the grounding conductor lug as shown.

CAUTION When using an extension cord, be sure to use a gauge heavy enough to carry the current your tool will draw. An undersized cord will cause voltage drops in the line, resulting in loss of power and motor overheating. The following table shows the correct size to use depending on the length of the wire and the ampere rating indicated on the tool nameplate. If in doubt use the next higher gauge.

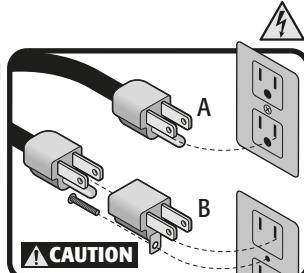

Ampere Capacity	Number of Conductors	Extension Gauge from 5.9 ft to 49 ft	Extension Gauge higher than 49 ft
From 0 A up to 10 A		18 AWG	16 AWG
From 10 A up to 13 A		16 AWG	14 AWG
From 13 A up to 15 A		14 AWG	12 AWG
From 15 A up to 20 A	3 (one grounded)	8 AWG	6 AWG

WARNING All wiring, electrical connections and grounding of the system must comply with the **MEXICAN OFFICIAL NOM-001-SEDE-INSTALACIONES ELÉCTRICAS (UTILIZACIÓN)** or with local codes and ordinances. A qualified electrician must be employed. It is recommended that the pump be supplied with a circuit that includes a differential switch with a rated current not greater than 30 mA.

WARNING When operating power tools, use a grounded extension cord marked "OUTDOOR USE" VOLTECK brand. These extension cords are specially designed for outdoor use and reduce the risk of electric shock.



General Power Tools Safety Warnings



⚠ WARNING! Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

Work area

Keep your work area clean, and well lit.

Cluttered and dark areas may cause accidents.



Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

Sparks generated by power tools may ignite the flammable material.



Keep children and bystanders at a safe distance while operating the tool.

Distractions may cause loss of control.



Electrical Safety

The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.

Modified plugs and different power outlets increase the risk of electric shock.



Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes or long hair may get caught in moving parts.



If you have dust extraction and recollection devices connected onto the tool, inspect their connections and use them correctly.

Using these devices reduce dust-related risks.

Power Tools Use and Care

Do not force the tool. Use the adequate tool for your application.



The correct tool delivers a better and safer job at the rate for which it was designed.

Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.



Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.

Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.

Most accidents are caused due to poor maintenance to the tools.



Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service

Repair the tool in a **TRUPER® Authorized Service Center** using only identical spare parts.

This will ensure that the safety of the power tool is maintained.

Children or people with reduced physical, sensory or mental capabilities shall not operate the tool, neither inexperienced people or without knowledge in the use of the tool, unless supervised by a person responsible of their safety or if receiving previous instructions about the tool operation.



Children shall be kept under supervision to double-check they will not play with the tool. Tight supervision shall be used with children or disabled persons to prevent from using or being close to any household tool.



This tool is in compliance with the Official Mexican Standard (NOM - Norma Oficial Mexicana).

Safety warnings for submersible pumps



• This submersible pump stands out for its flow rate, efficiency, simple structure and ease of use and maintenance. It is used for pumping projects in deep wells, springs and irrigation systems.

WARNING • Flammable, aggressive or unhealthy substances must not be pumped, nor must it be used with sewage.

CAUTION • The device is not suitable for commercial use; it is not suitable for permanent circulation in filter systems or for use with liquids containing abrasive materials (e.g. sand) or containing mixtures of earth, sand, mud or sludge. Any other use is considered inappropriate. Unexpected damage may occur as a result of improper use, modification to the device or the use of spare parts that have not been tested and approved by the manufacturer.

- Before using the appliance for the first time, the user must read and understand these instructions in order to ensure safe operation.
- Observe all safety instructions. Failure to do so may result in injury to the user and others.
- Keep this instruction manual and safety information for future reference.
- The appliance should not be used if it shows damage or does not function properly. In case of malfunction, the appliance should be repaired by an **TRUPER** Authorized Service Center.

WARNING • Do not use this appliance in areas where explosives are present or near flammable liquids or gases.

WARNING • Do not touch the electrical plug with wet hands. Always disconnect by the plug and not by pulling on the power cord.

CAUTION • Do not use the power cord to lift or support the pump in any way, or use it for other than its intended use.

- Connection must be to grounded outlets that have been properly installed and tested. The voltage of the power supply and the fuse must correspond to the technical data of the device.
- The device must be connected by means of a residual current circuit breaker (RCCB) with a short-circuit current design of not less than 30 mA
- Before switching on, it must be ensured that the power supply corresponds to the requirements of the device.
- The device must be operated only within the specified voltage, power and rated speed limits (see manufacturer's nameplate).

CAUTION • Do not twist, pinch or drive a vehicle over the power cord; protect it from sharp edges, oil or heat.

CAUTION • Extension cords should not be used.

CAUTION • In the event of damage to the power cord, disconnect the appliance from the power supply immediately. Never use the appliance if the power cord is damaged.

- Disconnect the plug from the power supply before servicing the appliance.

CAUTION • The appliance should be disconnected from the power supply when not in use.

CAUTION • Before connecting the appliance to the power supply, make sure that the switch is in the off position.

CAUTION • Before disconnecting the appliance, the switch must be turned to the Off position.


- Do not install and connect the appliance when there are people or animals in the medium to be pumped.

• Children under 16 years of age should not use this

appliance and should be kept away from the appliance when it is in operation.


• Any repairs should be made by a **TRUPER** Authorized Service Center. If repairs are made improperly there is a danger of liquid entering electrical components.

WARNING • Any changes or modifications to the equipment and the use of unapproved spare parts is not authorized.

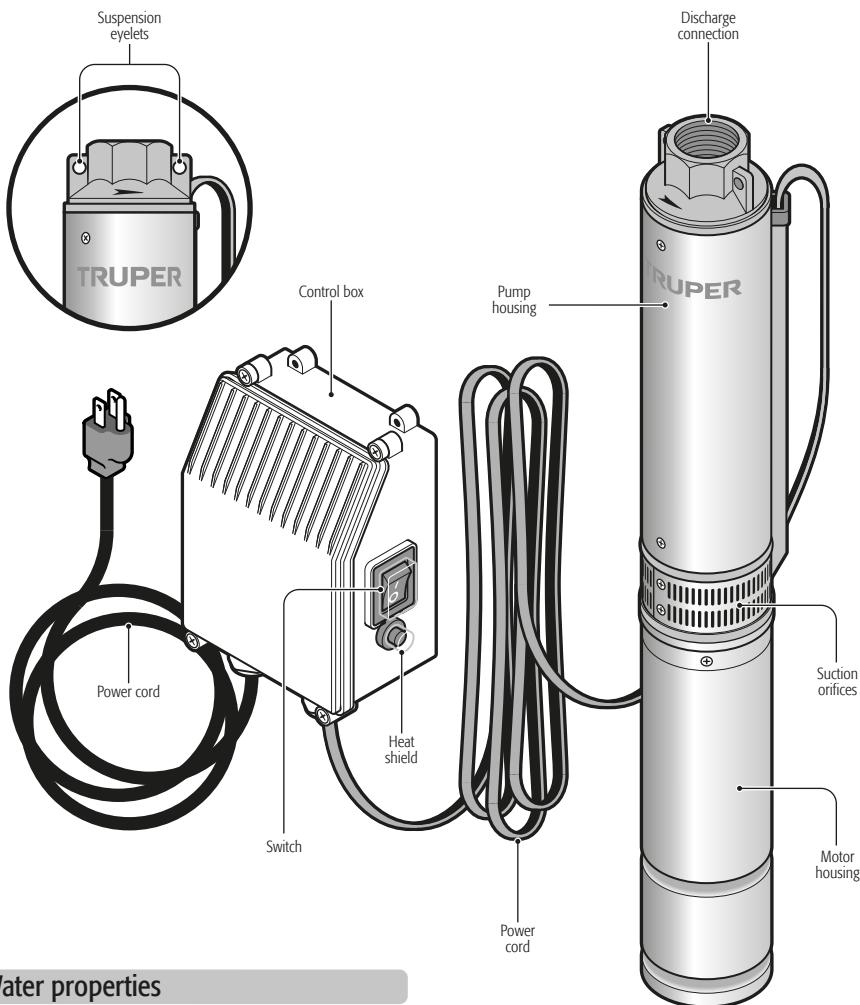

Water properties

- This line of submersible pumps is designed to work with clean water such as in the case of pumping deep wells and springs or in irrigation systems containing clean water with solids up to 2 mm (BOS-1/2LM2 and BOS-3/4LM2) and 2.5 mm (BOS-1LM2, BOS-1-1-1/2LM2 and BOS-2LM2) and the content of impurities should not exceed 0.02 % by weight.
- Water temperature should not exceed 95 °F;
- The acid balance of the water should be between 6.5 pH and 8.5 pH.
- The H₂S content should not exceed 1.5 mg/l.

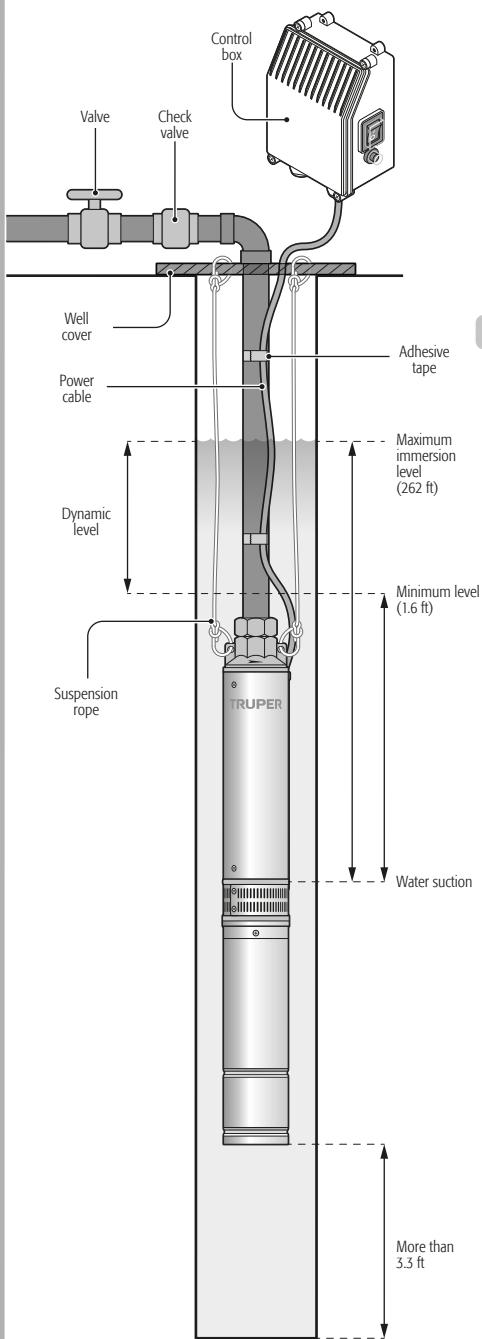

- A guide casing should be installed for deep well submersible pump with high flow rate and high power in large diameter wells or similar conditions.

- The pump should be installed vertically, with a maximum of 30 degrees inclined vertically. Under no circumstances should it be installed horizontally..

- The submersible deep well pump must be fully submerged in order to operate properly. Allowing it to run when not submerged will cause severe damage.

Mounting

1. Well check:

- Check the well diameter: Before purchasing and installing the pump, check if the internal diameter of the well meets the minimum dimensions of our deep well submersible pump.

- Washing the inside of the well: In case of a new well, remove objects and mud. Use an air compressor or an old submersible pump. When the water in the well meets pumping standards, then install pump in the well.

- Check the well water: Check if the water quality and temperature meet the conditions described for the pump.

- Insert a rope through the suspension eyelets of the pump, if the depth is less than 100 ft the rope should be waterproof and UV resistant, otherwise the rope may be damaged due to the vibration of the pump.

When the depth is more than 100 ft, fix it with steel wire. Do not use the power cable or discharge hose to lift or support the pump.

- Install the discharge pipe using a wrench to secure the connection.

- Slowly lower the pump into the well and hold the pump upwards. Secure the cable in the pipe with tape every two meters. Confirm that the cables are not pressed against the well wall during pump movement, which can damage the cable.

- During the lowering process of the pump, in case of jamming, do not continue forcing. This prevents blockage and damage to the pump.
- Determine the depth of the pump below the surface according to the mud content and the condition of the well. Do not place the pump above the mud. The distance between the pump and the bottom of the well should not be less than 3.3 ft.
- The distance from the submerged pump to the dynamic water level should be less than one meter. Otherwise, the pump may be damaged due to idle operation.
- If the pump is installed too low, a valve should be used in the tubing outside the well to control the flow rate and protect it from tripping over the motor control box because the flow rate is too low.
- Ground the motor line properly to avoid electrical leakage shock.

Maintenance

- After installing the pump, recheck the insulation resistance and confirm that there is no damage to the cable. Turn on the pump to test that everything is working properly. Check if the voltage and current at the control box comply with the technical parameters specified on the pump. The pump can be used after checking the flow rate and that there is no vibration or noise.
- After the pump has run for 5 hours for the first time, it should be shut down to check the heat resistance insulation. should not be less than $0.5\text{ M}\Omega$
- The time interval between shutdown and restart should be 20 minutes to prevent pump damage due to incomplete backflow. Start-up times must be considered so that the pump starts up to a maximum of 10 times in a span of 24 hours without exceeding its duty cycle of 50 min on and 20 minutes off.
- After normal operation, regular inspection of voltage, working current and insulation resistance the pump life can be extended.

- If any of the situations listed below exist, shut down the pump immediately for troubleshooting
1. Current exceeds 20% of the weighted current at the weighted head and weighted flow.
 2. When the dynamic water level is below the inlet seal, the water is pumped intermittently or will run dry.
 3. Violent vibration of the pump and piping.
 4. Voltage is too low.
 5. A fuse in the control box is blown.
 6. The heat resistance of the motor insulation to ground is less than $0.5\text{ M}\Omega$
 7. After the pump has run for one year or after it has been submerged for 2 years, take it out to clean debris or to replace worn parts.

Troubleshooting



Problem	Cause	Solution
No water can be pumped or water flow is too small.	<ul style="list-style-type: none">Motor will not start.	<ul style="list-style-type: none">Check for phase failure or bad contact.Check if a wire is undersized. If so, use a larger diameter wire.Check if the control box is suitable.Choose a suitable control box.
	<ul style="list-style-type: none">Blockage in the pipeline or on the screen.Blockage in impeller or wear in float ring or guide vane seal ring.Piping is broken or leaking water.Water flow is too large or flow is too small in the well and is lower than that of the pump.	<ul style="list-style-type: none">Clean the piping and screen.Remove debris inside the pump or replace impeller, guide vane and seal ring.Repair or replace piping.Replace the small flow pump or stop it for a moment and restart the pump as long as you have sufficient water flow in the well.
Excessive current or frequent shutdowns.	<ul style="list-style-type: none">Flow rate is too high / height is too short in the well and is lower than the pump.Pump shaft is bent / impeller is blocked.The rotator is blocked or the thrust bearing is badly worn.	<ul style="list-style-type: none">Adjust flow valve to decrease flow.Lower the motor load or replace with a low heat pump. <p>• Go to a TRUPER® Authorized Service Center.</p> <p>• Go to a TRUPER® Authorized Service Center.</p>
La resistencia al calor del motor es muy baja o el protector de fuga de tierra se dispara.	<ul style="list-style-type: none">The rubber cable is broken.Motor seal failure.	<ul style="list-style-type: none">Replace cable.Turn off the pump for maintenance and check that everything is tight.
The motor does not start, but it seems to have power.	<ul style="list-style-type: none">Phase failure.Voltage drops.	<ul style="list-style-type: none">Check the power cable and connect the fuse.Correct voltage drop to meet specified requirements.

If problems persist despite performing the recommended corrective actions,
contact a TRUPER® Authorized Service Center

Authorized Service Centers



In the event of any problem contacting a Truper Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers **800 690-6990** or **800 018-7873** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0557
BAJA CALIFORNIA	SUCRAL SJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL MOLINO II, C.P. 22244, Tijuana, B.C. TEL.: 664 969 5100
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ALVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083
CHIHUAHUA	SUCRAL CHIHUAHUA AV. SILVESTRE TERRAZAS #12-111, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052
MEXICO CITY	FIX FERRETERÍAS EL MONSTRUO DE CORREDOR, CORREDOR # 22, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861
COAHUILA	SUCRAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL: 871 209 68 23
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL: 314 332 1986 / 332 2013
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIJO #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL.: 618 817 1946 / 618 818 2844
ESTADO DE MÉXICO	SUCRAL CENTRO JILOTEPEC AV. PARQUE INDUSTRIAL 1, PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDÓ. DE MÉX. C.P. 54257, TEL: 761 782 9101 EXT. 5728 Y 5102
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 717 578 / 79 / 80 / 88
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL: 747 478 5793
HIDALGO	FERREPRESOS S.A. DE C.V. LIBERTAD ORIENTE #504 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616
JALISCO	SUCRAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZUÑIGA, JAL. TEL.: 33 3606 5285 AL 90
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858

MORELOS	FIX FERRETERÍAS CAPITAN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
NUEVO LEÓN	SUCRAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL: 287 106 3092
PUEBLA	SUCRAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL: 222 282 8282 / 84 / 85 / 86
QUERÉTARO	ARU HERRAMIENTAS S.A DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL: 984 267 3140
SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL: 444 822 4341
SINALOA	SUCRAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL: 644 413 2392
TABASCO	SUCRAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
TAMAULIPAS	VM ORINGS Y REPARACIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
YUCATÁN	SUCRAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451

Codes	Models	Brand
16934	BOS-3/4LM2	 TRUPER®
16933	BOS-1/2LM2	
12627	BOS-2LM	
12626	BOS-1-1/2LM	
12625	BOS-1LM	

Warranty. Duration: 1 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by **Truper®**. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 22, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. Phone number **800-018-7873**. Made in China. Imported by Truper, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



1
YEAR

Stamp of the business. Delivery date:

ANO

Sello del establecimiento comercial. Fecha de entrega:



Industrial 1, Parque Industrial Jiutepec, Jiutepec, Edo. de Mex. C.P. 54257, Tel. 761 782 9100.
 su red de servicios. Tel. 800-018-7873. Made in China. Importador Truper, S.A. de C.V. Parque
 consumibles y accesorios, incluye los gastos de transporte del producto que devuen de su cumplimiento de
 o en Coatepec 22, Coatepec, Cuautla, CDMX, 6060, donde también podra adquirir partes, componentes,
 pruebas de producto, poliza sellada o factura o recibo o comprobante, en el establecimiento donde lo compró
 funcionalmente, excepto si se usa en condiciones distintas a las normales; cuando no tiene operado conforme
 Garantía. Duración: 1 año. Cobertura: pizzas, componentes y mano de obra contra defectos de fabricación o
 institutivo; fijo alterado o preparado por personal no autorizado por Truper®. Para hacer efectiva la garantía
 de servicio, se usen en condiciones normales; cuando no tiene operado conforme
 su red de servicios. Incluye los gastos de transporte del producto que devuen de su cumplimiento de

Código	Modelos	Marca	
16934	BOS-3/4LM2	TRUPER®	
16933	BOS-1/2LM2		
12627	BOS-2LM		
12626	BOS-1-1/2LM		
12625	BOS-1LM		

Garantía
Poliza de

TRUPER®

En caso de tener algún problema para contactar un Centro de Servicio Autorizado Truper®, consulte nuestra página www.truper.com donde obtendrá un listado actualizado, o llame al: 800 690-6990 ó 800 018-7873 donde le informarán cuál es el Centro de Servicio más cercano.

ACUASCAUNTES DE TODO PRA LA CONSTRUCIÓN C.P. 20030. AGUASCALIENTES AGS, TEL.: 449 99 4537	BAJA CALIFORNIA AV. LA ENCAJADA LOTE #5, PARRUE INDUSTRIAL EL TEL.: 664 96 5100 CAMPACHE TORILLERÍA Y FERRERIA AAA AV. ALVARO OBREGÓN #34, CULIACÁN C.P. 24080 CAMPECHE, CAMP. TEL.: 981 15 2808	CHIHUAHUA AV. SISTEMAS EMBARAZOS #128-11, PARRUE INDUSTRIAL BAJAR, CARRETERA MEXICO-CUATROME C.P. 31415, CHIHUAHUA CHIH, TEL.: 962 118 4083 COAHUILA SCURSAL TORREN CALLE METAL MEXICANA #280, PARRUE INDUSTRIAL TEL.: 81 209 68 23 DURANGO TORNILLOS AGUILA S.A DE C.V. AV. MÉDICO JUAN DE [22], C.D. INDUSTRIAL, C.P. 38010. CELESTE, GTO, TEL.: 461 67 758 / 79 / 80 / 88 GUANAJUATO C.R. FERREROS S.A DE C.V. CLAVE 1, COL. SAN JUAN DE MANZANILLO TEL.: 663 252 5031 / 5522 4861 ESTADO DE MÉXICO SCURSAL CENTRO INTEGRAL AV. PARRUE INDUSTRIAL 1, PARRUE INDUSTRIAL TEL.: 761 782 910 EXT. 5782 Y 5102 MAZATLÁN #200, COL. LUIS ENHEBERA, DURANGO, DGCL, TEL.: 618 81 1946 / 618 818 2803 TEL.: 314 225 1986 / 320 2803 GUAHUATO C.R. FERREROS S.A DE C.V. CLAVE 101, COL. SANTA FE, C.P. 39010. ELBERARD DIRENTES #504 LOCAL 1, CDMX, C.P. 12000 ROBLEDO, COL. CENTRO, C.P. 34960, TULANCINGO, HGO. TEL.: 753 6615 / 753 6616 JALISCO SCURSAL GUADALAJARA AV. PADILLO BONI #600, COL. SANTA FE, C.P. 43050, MORELIA. TEL.: 35 3606 5285 AL 90 MICHIGÁN EX-HACENDA DE LA REPÚBLICA #310-A, COL. MPIO. UMAÑA, C.P. 97390, MORELIA, MIC. TEL.: 999 912 2451 MORELOS SCURSAL MONTERREY CALLE 33 #600 PISO 6TO, CALIDAD FIZNAC BY MUSAY, MPIO. UMAÑA, C.P. 97390, MORELIA, MIC. TEL.: 782 823 8100 / 282 8484 Nayarit HERRAMIENTAS DE TEPIC CALLE 27, 100, CULIACÁN, MOR. TEL.: 311 258 0540 NUEVO LEÓN SCURSAL PUEBLA AV. PERIFERICO #27, COL. CENTRO, C.P. 63000. PUEBLA SCURSAL PUEBLA AV. PERIFERICO #27, COL. CENTRO, C.P. 63000. QUINTANA ROO FIX FERRERIAS C.P. 77770 PLATA DEL CARMEN, QR. TEL.: 984 72 140 SINALOA SCURSAL OULTIAGA AV. EJES SUMMIT SITE #400, COL. HACIENDA DE LA MORA, C.P. 80140, CULIACÁN, SIN. TEL.: 663 151 959 / 173 8000 SONORA FIX FERRERIAS CALLE 5 DE FEBRERO #57, SUR 25 MZ 10, COL. CENTRO, C.P. 83000, C.D. OBREROS, SON. TEL.: 644 13 2592 TAMAULIPAS SCURSAL VILLEHERMOSA 2A ETAPA, RUTA 40 LOS TOTS, 1, 2 Y 3 MZ #1, COL. INDUSTRIAL, TEL.: 993 555 7244 TAMAULIPAS SCURSAL FIX FERRERIES CALLE ROSITA #57, ENTRÉ A 20 DE NOVIEMBRE Y C.P. 88780, ROBLEDO, R.F.M.C. REVOLCOS, R.F.M.C. REVOLCOS. TAMS, TEL.: 999 926 7552 TAXCÁLAGA SERVICIOS HERRAMIENTAS INDUSTRIALES CALLE 9970, SAN PABLO DEL MONTE, T.LAX. C.P. 90970, C.P. 90970. VERACRUZ LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMERA EZA 503, HORTENSIA, COL. TEL.: 222 227 5202 YUCATÁN SCURSAL MÉRIDA CALLE 33 #600 PISO 6TO, CALIDAD FIZNAC BY MUSAY, MPIO. UMAÑA, C.P. 97390, MORELIA, MIC. TEL.: 782 823 8100 / 282 8484	
--	---	--	--

Problema	Causa
No se puede bombear	<ul style="list-style-type: none"> • El motor no arranca. • El agua o el aceite que se pierde.

Comiente excesiva o de agua
<ul style="list-style-type: none"> • La tasa de flujo es muy alta / la altura es muy corta en el pozo y ésta más abajo que la bomba. • Ajuste la válvula de flujo para disminuir el flujo.

La resistencia al calor
<ul style="list-style-type: none"> • El cable de hule está roto. • Cambie el cable. • Apague la bomba para hacer el mantenimiento y revisar del motor es muy baja. • Falla en el sellado del motor. • Aparece la bomba para apretarla. que todo este apretada.

de agua se dispersa
<ul style="list-style-type: none"> • El protector de fugas de terne correte. • Cambia de tensión. • Fallo en la base. • El motor no arranca.

El motor no arranca.
<ul style="list-style-type: none"> • Revisa el cable eléctrico y conecte el fusible. • Cambie la bomba para cumplir con los requisimientos específicos.


que todo este apretada.

• Cambie la bomba para cumplir con los requisimientos específicos.
<ul style="list-style-type: none"> • Cambie la bomba para cumplir con los requisimientos específicos. • Cambie la bomba para cumplir con los requisimientos específicos. • Cambie la bomba para cumplir con los requisimientos específicos.
<ul style="list-style-type: none"> • Cambie la bomba para cumplir con los requisimientos específicos.
<ul style="list-style-type: none"> • Cambie la bomba para cumplir con los requisimientos específicos.
<ul style="list-style-type: none"> • Cambie la bomba para cumplir con los requisimientos específicos.


• Cambie la bomba para cumplir con los requisimientos específicos.
<ul style="list-style-type: none"> • Cambie la bomba para cumplir con los requisimientos específicos.
<ul style="list-style-type: none"> • Cambie la bomba para cumplir con los requisimientos específicos.
<ul style="list-style-type: none"> • Cambie la bomba para cumplir con los requisimientos específicos.
<ul style="list-style-type: none"> • Cambie la bomba para cumplir con los requisimientos específicos.

- ## Montaje
- Se debe instalar una clavijeta guía para bomba sumergible de pozo profundo con fosa de grano diámetro o condiciones similares.
 - La bomba se debe instalar verticalmente, con un máximo de 30 grados inclinada a lo vertical. Por ningún motivo se debe instalar en horizontal.
 - La bomba se debe instalar en pozos de gran diámetro. Dejar que funcione cuando no está sumergida sumergir por completo para poder funcionar corretamente.
 - La bomba sumergible para profundidad es deseable mantenerla en pozos de grano diámetro o condiciones similares.
- Ocasionalmente se dan situaciones severas.

- Revise el diámetro del pozo: Antes de comprar e instalar la bomba, revise si el diámetro interno del pozo cumple con las medidas mínimas de nuestra bomba sumergible para pozo profundo.
- Revise el diámetro del pozo: Revise si la bomba se adapta al diámetro del pozo.
- Revise la profundidad del pozo: Antes de comprar e instalar la bomba, revise si la profundidad del pozo cumple con las normas de bombas sumergibles.
- Revise si la bomba cumple las condiciones descritas para la bomba.
- La bomba se debe instalar a una distancia menor a 30 m de la otra bomba.
- Inserte una curveta a través de los oíllos para vibración de la bomba.
- 2. Inserte una curveta a través de los oíllos para vibración de la bomba.
- 3. Coloque el tubo de alimentación en el túnel de suspensión para elevarla o sostener la bomba.
- 4. Introduzca lentamente la bomba en el pozo e ingresa para asegurar la conexión.
- 5. Utilice el cable de alimentación en el túnel de suspensión para elevarla o sostener la bomba.
- 6. Mantenga la bomba hacia arriba. Fije el cable en el tubo con clavija adhesiva cada dos metros; confirme que los cables no queden presionados contra la pared del pozo durante el movimiento de la bomba, lo cual puede dañar la bomba.

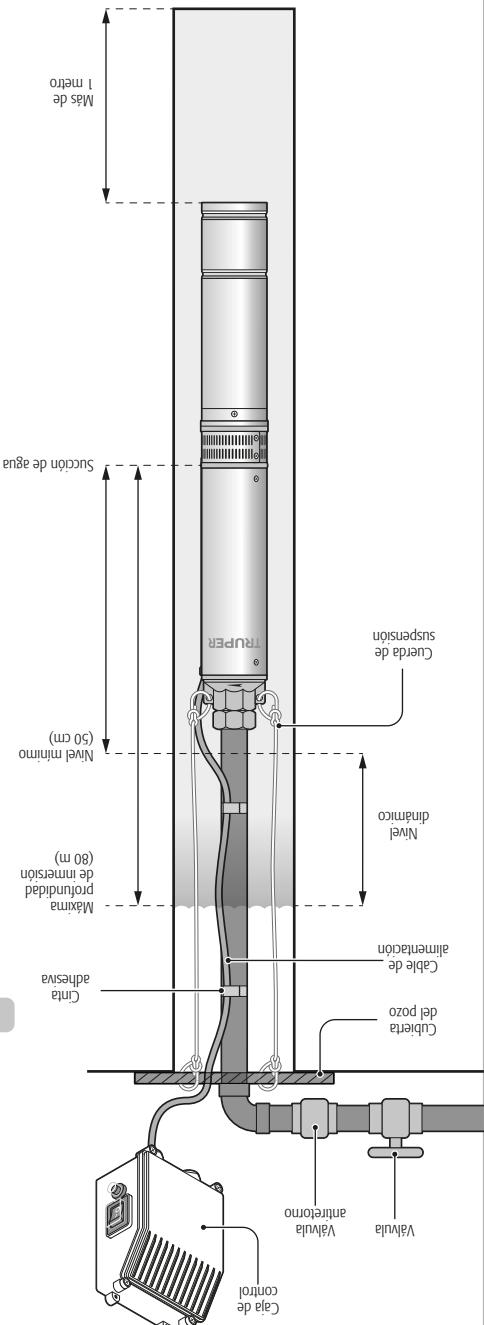

Partes

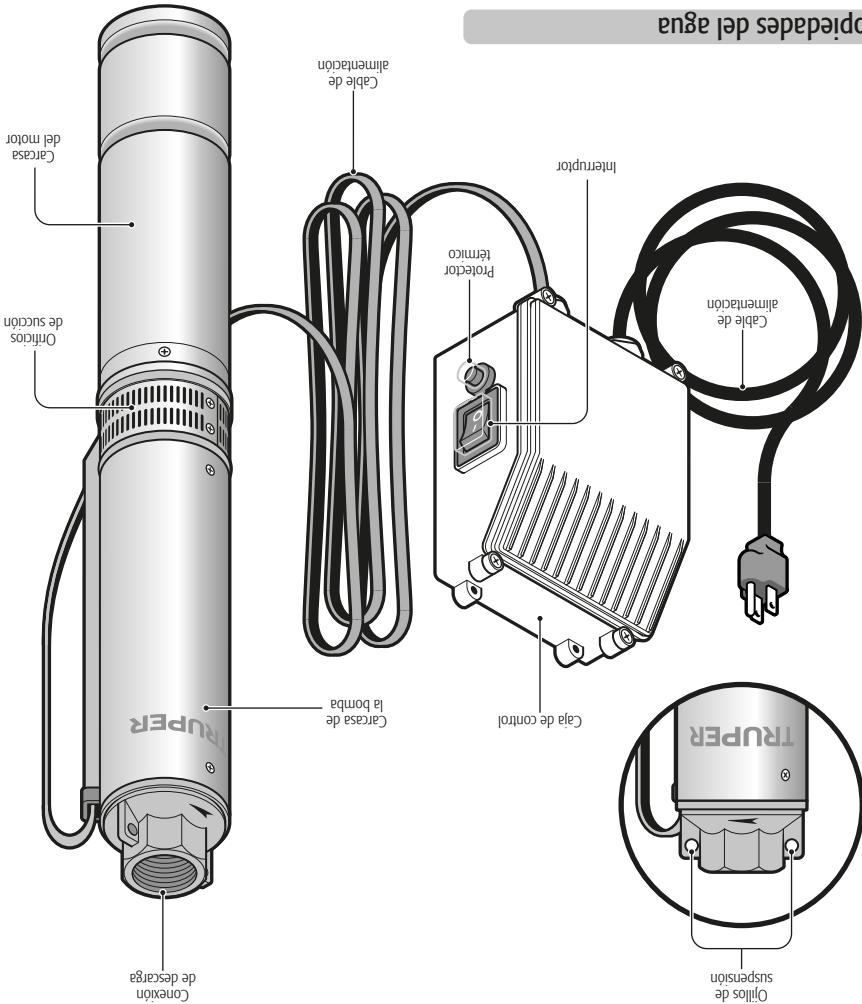

Propiedades del agua

- El contenido de H_2S no debe ser mayor a 1.5 mg/l.
- El balance ácido del agua debe estar entre 6.5 PH y 8.5 PH.
- La temperatura del agua no debe superar los 35 °C.
- La densidad del agua no debe superar a 0.02 % por peso.
- Los modelos BOS-1-1/2LM2 y BOS-2LM2 y el continuo de impurezas BOS-1-1/2LM2 y BOS-2LM2 y el continuo de impurezas BOS-1-1/2LM2 y BOS-3-4LM2, 2.5 mm (BOS-1LM2, 2 mm (BOS-1-1/2LM2 y BOS-3-4LM2) y el continuo de impurezas due contiene agua limpia con sólidos de hasta 2 mm (BOS-1-1/2LM2 y BOS-3-4LM2).
- Esta línea de bombas sumergibles está diseñada para trabajar con agua limpia como en el caso de bombeo de pozos profundos y manantiales o sistemas de riego que contenga agua limpia con sólidos de hasta 2 mm (BOS-1-1/2LM2 y BOS-3-4LM2).


ADVERTENCIA Al operar el interruptor de diferente polaridad que la conexión eléctrica en exteriores, utilice una extensión para el uso en exteriores y reduzca el riesgo de sufrir una descarga eléctrica.

ADVERTENCIA Al operar el interruptor de diferente polaridad que la conexión eléctrica en exteriores, utilice una extensión para el uso en exteriores y reduzca el riesgo de sufrir una descarga eléctrica.

NORMA OFICIAL MEXICANA NOM-001-SEDE, INSTALACIONES ELÉCTRICAS (MULTILAZION) O con los códigos y ordenanzas locales. Debe cumplir con la norma de sistema, debe cumplir con la norma de sistema, debe cumplir con la norma de sistema.

ADVERTENCIA Todo el cableado, las conexiones eléctricas y la conexión a tierra del sistema, deben cumplir con la norma de sistema.

de 0 A hasta 10 A	16 AWG	18 AWG	18 AWG	16 AWG																										
de 10 A hasta 13 A	14 AWG	16 AWG																												
de 13 A hasta 15 A	12 AWG	14 AWG																												
de 15 A hasta 20 A	10 AWG	12 AWG																												

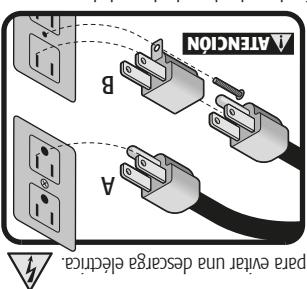

ADVERTENCIA Si tiene dudas sobre el uso de sujetacables de alambre más alto, debe consultar la especificación del motor. La siguiente tabla muestra el amperaje necesario para el uso de sujetacables de alambre más alto.

que debe usarse dependiendo de la longitud del cable y de la capacidad del motor. La siguiente tabla muestra el amperaje necesario para el uso de sujetacables de alambre más alto.

potencia y sobrecalentamiento del motor. La siguiente tabla muestra el amperaje necesario para el uso de sujetacables de alambre más alto.

para transportar la corriente que consumirá el herramienta. Un cable de uso el cable suficiente para el uso de sujetacables de alambre más alto.

conecte la red de conductores de tierra como se indica.

AUTENCIÓN Utilice un adaptador temporal como se muestra en el empleo **B** siempre

MOTIVO. Utilice un adaptador temporal como se muestra en el empleo **B** (oficios), NO

REMUEVA O ALTERE EL CONDUCTOR DE TIERRA DE SU CLAVIJA POR NINGUNO

• Si coloca una clavija de placa para la conexión de dos cables, no esté seguro verifique con un técnico calificado.

• Evite que las conexiones de tierra se solubilicen dentro de la conexión de tierra.

• Evite que las conexiones de tierra se solubilicen dentro de la conexión de tierra.

ADVERTENCIA La herramienta debe ser conectada a tierra mediante un dispositivo de protección contra descargas eléctricas.

Reducentes eléctricos

ADVERTENCIA Antes de operar accese a las terminales, todos los circuitos de alimentación deben ser desconectados.

• La construcción del dispositivo eléctrico de esta herramienta es alterada por soluciones dentro de líquidos o humedad.

• La construcción del dispositivo eléctrico de esta herramienta es alterada por soluciones dentro de líquidos o humedad.


• Automizado **C TRUPEER**, con el fin de evitar algún riesgo de descarga o accidente considerable.

• El cable de alimentación tiene sujetacables tipo Y.

La clase de alimentación térmica de los devanados del motor: Clase F.
La clase de construcción de la herramienta: Aluminio básico.

El cable de alimentación tiene sujetacables tipo Y.

Código	12627	BOS-1/LM	BOS-3/4LM	16934	16265	12626	BOS-1/LM	BOS-3/4LM	16933
Protección de sobrecorriente	25 A	20 A	20 A	15 A	15 A	10 A	10 A	8 A	8 A
Corriente	20 A	20 A	15.5 A	12 A	12 A	8.5 A	8.5 A	6 A	6 A
Altura máxima	80 m	60 m	60 m	40 m	40 m	38 mm	38 mm	32 mm	32 mm
Velocidad	160 L/min	160 L/min	160 L/min	120 L/min	120 L/min	80 m	80 m	60 m	60 m
Máxima profundidad de inmersión	80 m	60 m	60 m	40 m	40 m	38 mm	38 mm	32 mm	32 mm
Temperatura máxima del líquido	35 °C	35 °C	35 °C	0.9 m	0.9 m	160 L/min	160 L/min	120 L/min	120 L/min
Largo del cable de alimentación	120 m	120 m	120 m	100 m	100 m	80 m	80 m	60 m	60 m
Paso de partículas de hasta	2 mm	2 mm	2 mm	2.5 mm	2.5 mm	32 mm	32 mm	38 mm	38 mm
Ciclo de trabajo	50 min de trabajo por 20 min de descanso. Máximo duración 6 horas.	50 min de trabajo por 20 min de descanso. Máximo duración 6 horas.	50 min de trabajo por 20 min de descanso. Máximo duración 6 horas.	50 min de trabajo por 20 min de descanso. Máximo duración 6 horas.	50 min de trabajo por 20 min de descanso. Máximo duración 6 horas.	0.9 m	0.9 m	160 L/min	160 L/min
Alta máxima	60 Hz	60 Hz	60 Hz	80 m	80 m	120 L/min	120 L/min	160 L/min	160 L/min
Diámetro de salida	3450 r/min	3450 r/min	3450 r/min	38 mm	38 mm	80 m	80 m	60 m	60 m
Velocidad	120 L/min	120 L/min	120 L/min	80 m	80 m	160 L/min	160 L/min	160 L/min	160 L/min
Corriente	8 A	8 A	8 A	10 A	10 A	15 A	15 A	20 A	20 A
Frecuencia	50 Hz	50 Hz	50 Hz	50 Hz	50 Hz				
Descripción	110 V ~	110 V ~	110 V ~	16933	16934	12626	12627	BOS-1/LM	BOS-3/4LM
Tensión									
Códigos									

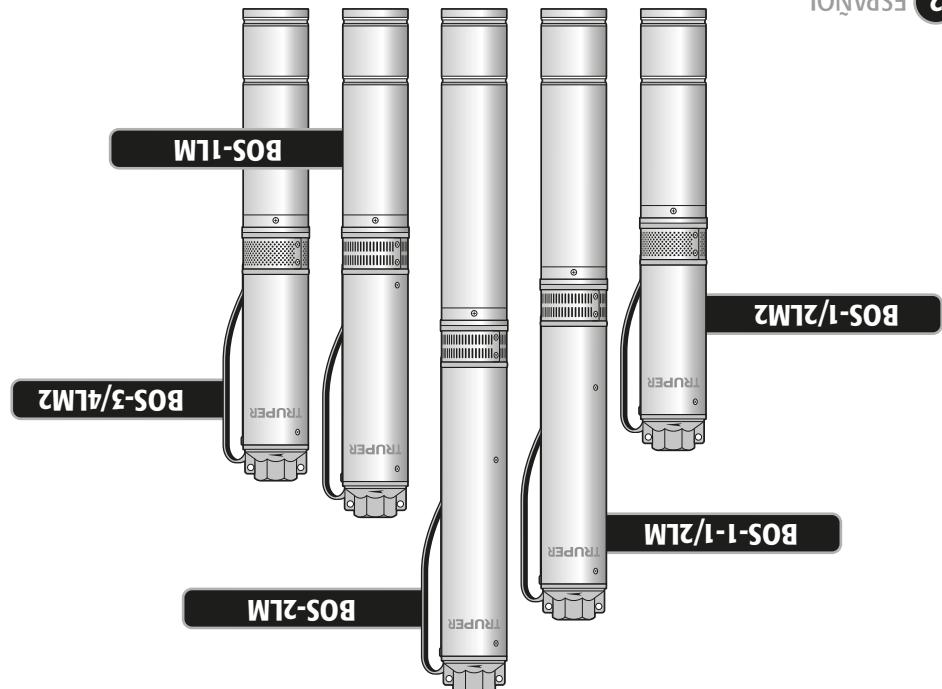

Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser lesionado gravemente, es fundamental necesariamente tenerlo y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.

Guarde este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la herramienta.


ATENCIÓN

- | | |
|----|---|
| 12 | Poliza de Garantía. |
| 11 | Centros de Servicio Autorizados. |
| 10 | Notas. |
| 9 | Solución de problemas. |
| 8 | Mantenimiento. |
| 7 | Puesta en marcha. |
| 6 | Instalación. |
| 5 | Partes. |
| 4 | Advertencias generales de seguridad para herramientas eléctricas. |
| 3 | Requerimientos técnicos. |
| 3 | Especificaciones técnicas. |



Lea este instructivo por completo
antes de usar la herramienta.

ATENCION

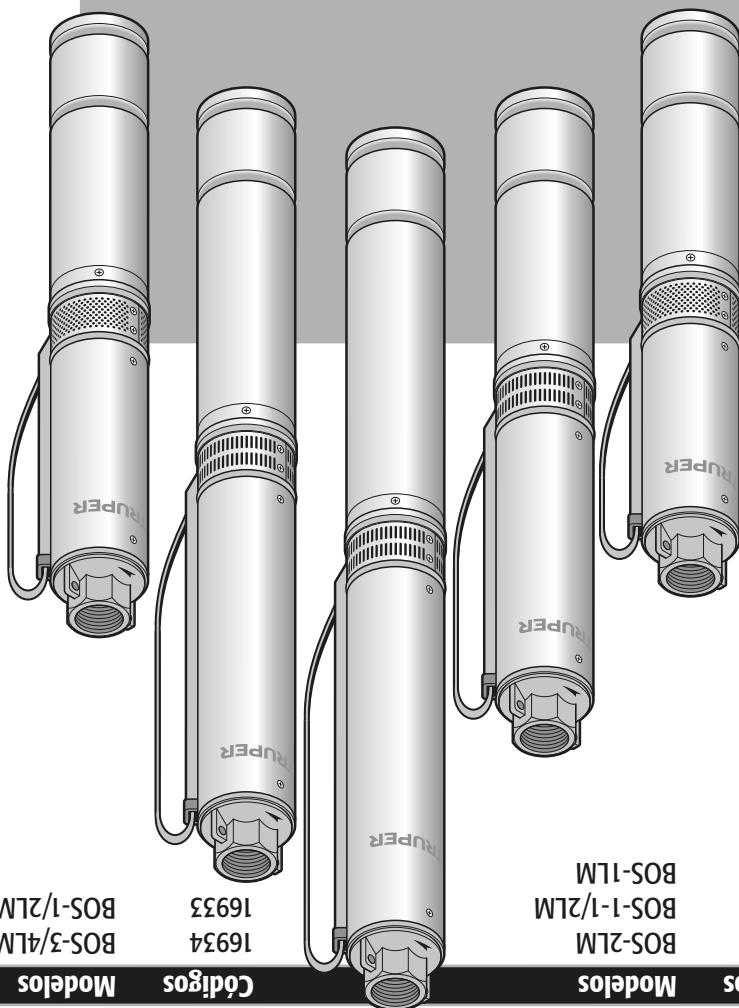

Códigos Modelos Códigos Modelos Códigos Modelos

12625 BOS-1-1LM
12626 BOS-1-1/2LM
12627 BOS-2LM

Este instructivo es para:

Uso industrial
y agrícola

Bombas sumergibles

Instructivo de

TRUPER®

ESPAÑOL
ENGLISH